

How to replace a device on the Quantec Call System

Please make sure you have read the full Quantec Instruction manual (Document Number DNU6012001) before carrying out the following steps.

1. First remove the old, damaged, or faulty device from the system. The Quantec panel's display will show the missing device and displayed in brackets will be the device's internal address number, for example '27' (see Fig 1).

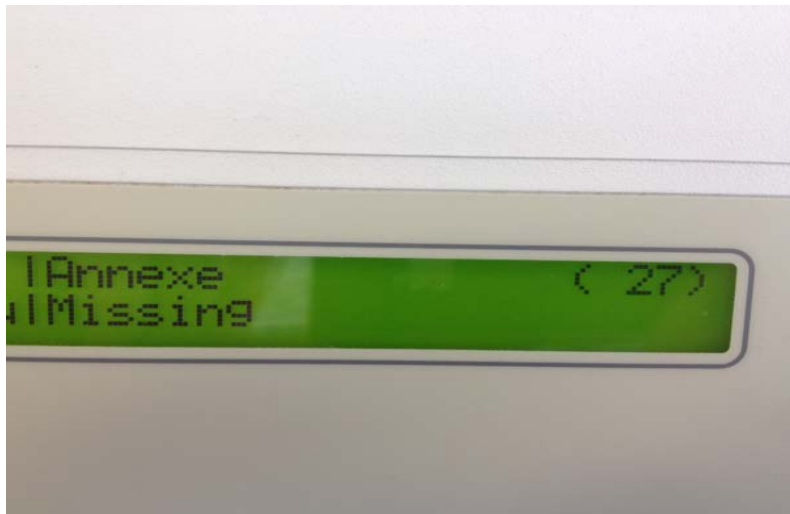


Fig. 1

2. At the Quantec panel enter engineer's access level 3 by inputting the four digit code. Select the 'Replace Device' menu option (Program Menu – System Setup – Set Assignment – Replace Device).
3. When requested by the panel, fit the 'NVM' link. This is located in a central position on the main printed circuit board (see Fig 2). The indication light will illuminate.



Fig. 2

4. At the Quantec panel a number will be displayed, for example number '02'. Use the scroll buttons to select the required address number, for example '27' and press the Accept 'A' button.
5. The panel will now request that you activate the new device. Go to the new device and activate it as follows:
 - For Call Points, press the 'Call' button
 - For devices that do not have call buttons, e.g. infrared ceiling receivers, short the call link
 - For a door monitor point, turn the Isolation key to isolate for a few seconds.
6. At the Quantec panel press the Escape 'E' button to exit the menus.
7. Finally, check the new device is working and the Quantec panel's display is showing correct device information.